Part Number: HW5565-30D-HP




#### **Description**

This antenna consists of a  $0.6\,\mathrm{m}$  reflector, feeder and a n t e n n a mounting bracket . The mounting bracket is designed for installation on vertical pipe of diameter  $35\,\mathrm{mm}$  to  $75\,\mathrm{mm}$ . The precise antenna mounting bracket provides adjustment ranges of  $\pm 19^\circ$  fine elevation and  $\pm 11^\circ$  fine azimuth. Unique feature of honorwave mounting bracket is the "Radio Installation Plate ". This plate makes it easy to align antenna while radio is Installed on the mount.

#### **Notice**

The installation, maintenance or removal of antenna systems requires qualified, experienced personnel. This installat ion instructions have been written for such personnel. Antenna systems should be inspected once a year by qualified personnel to verify proper installation, maintenance, and condition of equipment. Honorwave disclaims any liability or responsibility for the results of improper or unsafe installation practices.

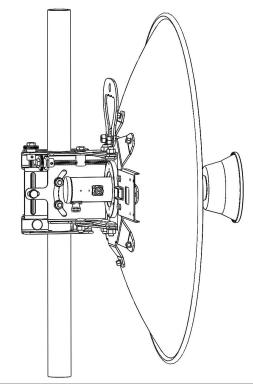

Tools Required					
Item	Contents	Qty	Image		
1	Combination Wrench, 13mm	1	5		
2	Screwdriver, cross-recess	1	- DE		


Part List				
Item	Contents	Qty	Description / Image	
А	Reflector 0.6m & Mounting	1		
В	Feeder	1		
С	Screw M4x12, Cross, st	4		
D	Spring Washer M4, st	4	Feed to Reflector	
Е	Washer M4, st	4		
F	Installation Guide	1		

Page 1/4 www.honorwave.com

Part Number: HW5565-30D-HP



# Installation

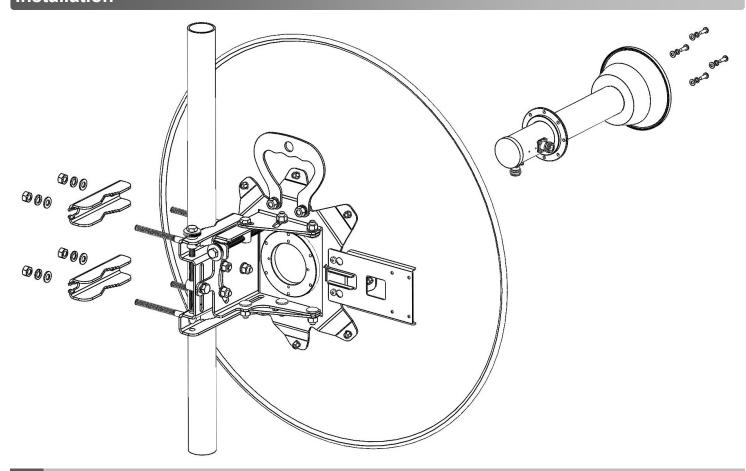


### 1 Install Feed to Reflector

Install Feed [B] to Reflector [A] by:

[C] Screw M4x12; 4 pcs

[D] Spring Washer M4; 4 pcs

[E] Washer M4; 4 pcs

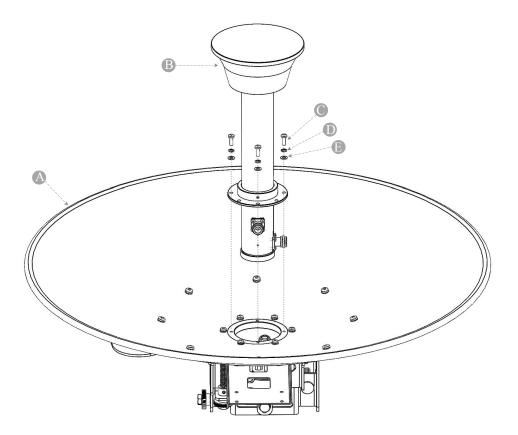


Page 2/4 www.honorwave.com

Part Number: HW5565-30D-HP



### 2 Attach Antenna to Mounting Pole


Follow the picture to attach antenna to mounting pole then place the U-bolts on the M8x120 Screws and tighten M8 nuts.

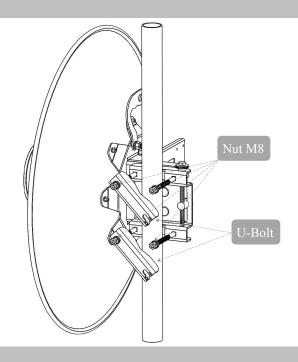

## Adjust Azimuth and Elevation

After an approximate alignment, both elevation and azimuth could be precisely adjusted by tightening/loosening the elevation and azimuth screws shown in picture.

When azimuth/elevation are set, tighten all nuts to approximately 14N-m (10 lb-ft).

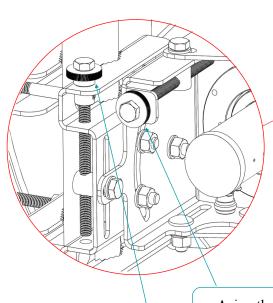

Important:

The Radio Installation Plate on the Mounting bracket is to install radio box .

Azimuth Adjustment Screw

Elevation Adjustment Screw

Page 3/4 www.honorwave.com

Part Number: HW5565-30D-HP



# **TECHNICAL DATA SHEET**

### **General Specifications**

Model Number HW5565-30D-HP

Diameter (ft/m) 2/0.6

Polarization Dual (Vertical and Horizontal)

### **Electrical Specifications**

Input 2 × N-Female

Frequency Range (MHz) 5.5 GHz to 6.5 GHz

VSWR 1.4:1 Impedance ( $\Omega$ ) 50 Gain (dBi) 30

3dB Beamwidth H-plane: 5° / E-plane: 5°

F/B Ratio (dB) 40

#### **Mechanical Specifications**


Weight With Holder (kg) 5 kg
Color Golden
Screws and Nuts Galvanized
Fine Azimuth Adjustment ±11°

Fine Elevation Adjustment ±19°
Wind Loading (km/h) 200

Operating Temperature -40 °C to 60 °C

Supportable Comparative Damp 90%

#### **Patterns**

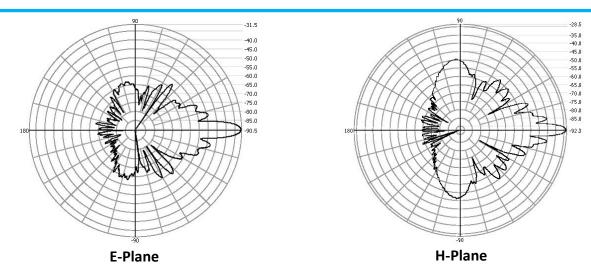

For further technical support leave message at

E-mail: support@honorwave.com

whatsapp: +49 1520 7018 287 8 A.M - 5 P.M (GMT+2)

All messages will be answered in 2 working days.

Page 4/4 www.honorwave.com